

# INSTALLATION GUIDELINES REGUPOL everroll tiles



## Important Notice

Any circumstances not covered by this guide should be referred to REGUPOL Australia Pty. Ltd. or its Distributors for any particular attention required. There are many factors that may affect the outcome of projects using our products that are beyond our control REGUPOL Australia Pty. Ltd. cannot be responsible for poor climate conditions, inadequate surface preparation, poor application techniques, not observing curing times, improper thinning of adhesives or any variable beyond our control. No liability is accepted REGUPOL Australia Pty. Ltd., our employees, distributors, representatives or agents for any loss or damage, direct or indirect, that may result from using the information and/or suggestions as actual conditions for use that are beyond our control. It is important that readers assure themselves they are using the current installation procedure, if in doubt, please contact our team so we can assist you.

## Testing and Technical Support

All materials should be checked and tested for their suitability to the prevailing site conditions, our team can assist you with this upon request.

Call us on 02 4624 0050 or email [technicalsupport@regupol.com.au](mailto:technicalsupport@regupol.com.au)

## Terms and Conditions of Sale

All purchases are subject to our published Terms and Conditions of Sale visit [www.regupol.com.au](http://www.regupol.com.au)

Copyright © 2021 REGUPOL Australia Pty. Ltd.


# CONTENTS

<b>Important Notice</b> .....	<b>2</b>
<b>Testing and Technical Support</b> .....	<b>2</b>
<b>Terms and Conditions of Sale</b> .....	<b>2</b>
<b>INTRODUCTION</b> .....	<b>4</b>
<b>CONCRETE SEALERS AND ADHESIVES</b> .....	<b>5</b>
<i>CONCRETE SEALER/S</i> .....	5
<i>ADHESIVE/S</i> .....	5
<i>JOINT SEALER</i> .....	5
<b>PRE-INSTALLATION REQUIREMENTS</b> .....	<b>6</b>
<i>SITE-INSPECTION</i> .....	6
<i>PROTECTION</i> .....	6
<i>TIME LAPSE BEFORE USE</i> .....	6
<i>STORAGE OF MATERIALS</i> .....	7
<i>INSTALLATION WITNESS POINT INSPECTIONS</i> .....	7
<b>SUBFLOORS AND UNDERLAYS</b> .....	<b>8</b>
<i>SUBFLOOR PREPARATION AND TESTING</i> .....	8
<b>GENERAL CONDITIONING</b> .....	<b>10</b>
<i>CONDITIONING OF FLOOR COVERING AND SUBFLOOR</i> .....	10
<i>SITE CONDITIONS</i> .....	10
<b>INSTALLATION GUIDELINES</b> .....	<b>11</b>
<i>INSTALLATION</i> .....	11
<i>MATERIAL INSPECTION</i> .....	11
<i>EXPANSION JOINTS</i> .....	11
<i>GROUTING &amp; PERIMETER EDGES</i> .....	11
<b>INSTALLATION OF FLOORING</b> .....	<b>12</b>
<i>TILE &amp; PLANK INSTALLATION</i> .....	12
<b>PROTECTING THE FLOOR</b> .....	<b>14</b>


## INTRODUCTION

The installation of the REGUPOL everroll collection of rubber flooring products should be in strict accordance with the current Australian Standards AS 1884:2021 - AS 1884:2021 - Resilient sheet and tile – Installation Practices in its complete entirety.	□
The installation should follow guidance of the written specification as well the manufacturer’s installation guidelines and product technical data sheets.	□
A licensed copy of the Australian Standard AS 1884:2021 can be purchased from <a href="http://www.saiglobal.com">www.saiglobal.com</a>	□
Technical support is available - please contact REGUPOL Technical Services on 02 4624 0050 or email <a href="mailto:technicalsupport@regupol.com.au">technicalsupport@regupol.com.au</a>	□

### Dry Areas

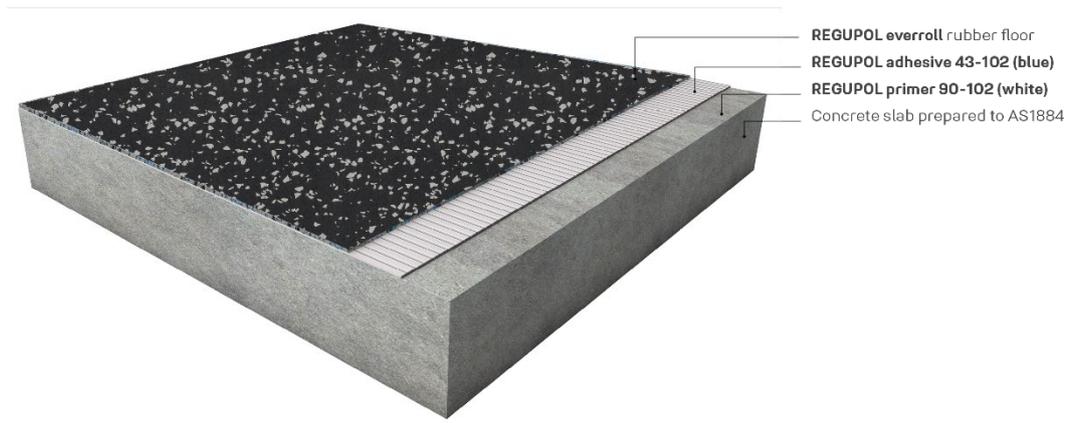

### Wet Areas

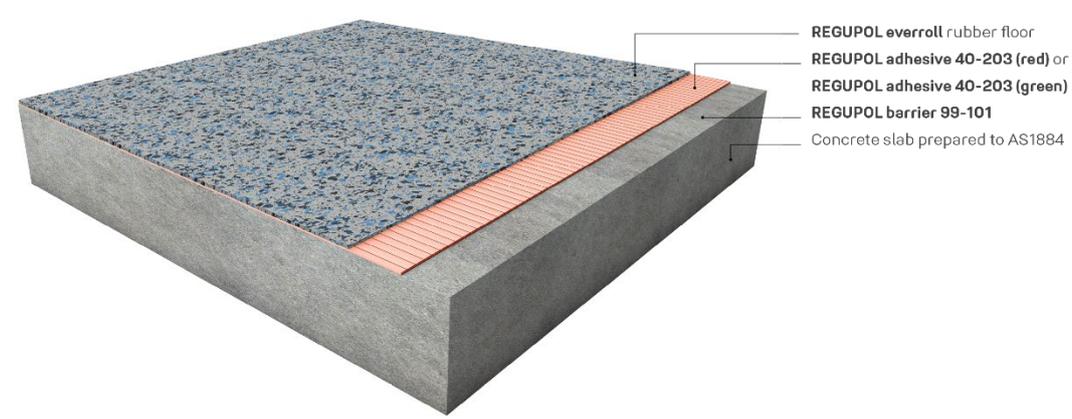

## CONCRETE SEALERS AND ADHESIVES

---

### CONCRETE SEALER/S

**REGUPOL primer 90-102** – A water based acrylic primer for porous subfloors in dry areas. Use in conjunction with REGUPOL One Part Multi-Use Flooring Adhesive.



**REGUPOL barrier 99-101** - Two Part Water Based Epoxy Moisture Sealer – A two-part water-based epoxy coating moisture and vapour barrier for wet areas. Use in conjunction with REGUPOL One Part Polyurethane and REGUPOL Two Part Resilient Polyurethane.

---

### ADHESIVE/S

**REGUPOL adhesive 43-102** - One Part Multi-Use Flooring Adhesive (BLUE) - A water based synthetic polymer adhesive with moisture resistant properties for dry areas.

**REGUPOL adhesive 40-203** - One Part Polyurethane Adhesive (GREEN) - A solvent free elastomeric moisture cured one-part polyurethane adhesive for wet areas.



**REGUPOL adhesive 41-103** - Resilient Two Part Polyurethane Adhesive (RED) - A solvent free, non-flammable two-part polyurethane adhesive and for dual bonding REGUPOL everroll rubber flooring to REGUPOL acoustic underlay's and acoustic tiles.

---

### JOINT SEALER

**Fix ALL High Tack Adhesive Sealant** – A high quality, neutral elastic, 1-component sealant with very high initial tack.



## PRE-INSTALLATION REQUIREMENTS

---

### SITE-INSPECTION

The site inspection by the flooring contractor should be in accordance with the entirety of SECTION 2 PRE-INSTALLATION REQUIREMENTS of AS 1884:2021.

The REGUPOL everroll rubber flooring is a resilient finish that will naturally form with the subbase provided, it is therefore very important to ensure that pre-installation requirements are completed by the flooring contractor and agreed with by the client prior to commencing works.

The flooring contractor is responsible for the EXCHANGE OF INFORMATION as per AS 1884:2021.



The flooring contractor is responsible to ensure that the specifications for all products selected within the flooring structure are tested and warranted to be compatible. This includes existing floor, damp-proof membranes, screeds, underlays, adhesives and floorcovering as per AS 1884:2021 2.3.2 Commercial Installations.

The flooring contractor should immediately notify REGUPOL Technical Services should any uncertainty arise regarding the installation of the REGUPOL everroll material being fit for purpose.

---

### PROTECTION

Provision for protection should be made if other trades will be working in the area post installation



---

### TIME LAPSE BEFORE USE

Keep all traffic off the finished floor for 48 hours or as instructed by the flooring contractor, whichever is the greater.

Do not apply heavy loads or move furniture on the material for 72 hours or as instructed by the flooring contractor, whichever is the greater. Where necessary place MDF sheets to spread the point loading of heavy loads.



Do not wet the floor for seven (7) days after the installation or as instructed by the flooring contractor, whichever is the greater.

---

# INSTALLATION GUIDE

## REGUPOL everroll tiles



---

### STORAGE OF MATERIALS

Store all materials horizontally indoors and off the ground on a flat, dry level sub-base at all times during warehousing and on-site.



---

Any edges that have been compressed, resulting in permanent memory curl must be removed by cutting straight before installation.



---

Do not get the material wet or exposed to moisture, failure to keep the material dry prior to and during the installation will make bonding to the substrate very difficult and could lead to adhesion failure.



---

### INSTALLATION WITNESS POINT INSPECTIONS

Instructions should be given to ensure sufficient notice so that inspections can be made at the following stages of installation. Inspections should be signed by head contractor, architect, interior designer, or client and recorded for warranty purposes:

- At completion of substrate preparation
- Immediately before fixing the material
- At completion of installation
- Before applying any additional surface coatings, sealers, line markings etc.



## SUBFLOORS AND UNDERLAYS

### SUBFLOOR PREPARATION AND TESTING

The subfloor preparation, inspection, testing and acceptance by the flooring contractor should be in accordance with SECTION 3 SUBFLOORS AND UNDERLAYS of AS 1884:2021 in its entirety.

The subfloor is to be clean and free of any deposit or finish which may impair adhesion or the location and functioning of control joints.

Mechanically remove all surface treatments including sealers, adhesives, hardeners, curing compounds

The surface shall be visually sound and without cracks, crazing, dusting, rain damage, spalling, efflorescence, or blistering.

Subfloor planeness to be no more than 4mm deviation when tested under a two (2) metre straight edge.

Subfloor smoothness to be no more than 1mm deviation under a 150mm straight edge.

Subfloor projections to be no more than 0.5mm deviation under a 150mm straight edge.

Moisture testing of subfloor in accordance with AS 1884:2021 APPENDIX A. The moisture content must be at the level required for the selected adhesive before the installation can commence. The relative humidity should not exceed 80% tested to ASTM F2170.

Use **REGUPOL barrier 99-101** - Two Part Water Based Epoxy Moisture Sealer if the substrate exceeds the required moisture content - contact REGUPOL Technical Services.

Subfloor pH testing of subfloor in accordance with AS 1884:2021 APPENDIX C. The pH level must be at the level required for the selected adhesive before the installation can commence. If the pH level exceeds 10 then it must be neutralised prior to beginning the installation.

Timber, Plywood and Particle Board Subfloors must comply with AS 1884:2021. Under certain lighting conditions the underlay joint may show through the REGUPOL everroll rubber flooring.

Hardboard underlay, fibre cement underlay must comply with AS 1884:2021. Under certain lighting conditions the underlay joint may show through the REGUPOL everroll rubber flooring.

Engineered screed subfloors in accordance with AS 1884:2021.

For metal, steel, aluminium, fibreglass surfaces contact REGUPOL Technical Services.

# INSTALLATION GUIDE

## REGUPOL everroll tiles



---

For adhesion testing conducted in wet areas and especially swimming pool surrounds - ensure the **REGUPOL barrier 99-101** - Two Part Water Based Epoxy Moisture Sealer is also used and allowed to fully cure - prior to applying the adhesive and material, but not left open for more than 24 hours - refer to technical data sheet.

---



**CAUTION:** Never install REGUPOL Underlay, REGUPOL Tiles or REGUPOL everroll collection of rubber flooring directly to roof top waterproof membranes. For damp proof membranes - contact REGUPOL Technical Services for testing or advice.

**SPECIAL NOTE** - The Flooring contractor is responsible to ensure that the specifications for all products selected within the flooring structure are tested and warranted to be compatible. This includes existing floor, damp-proof membranes, screeds, underlays, adhesives and floorcovering as per AS 1884:2021 2.3.2 Commercial Installations.

## GENERAL CONDITIONING

---

### CONDITIONING OF FLOOR COVERING AND SUBFLOOR

The conditioning of floor covering adhesives and subfloor by the flooring contractor should be in accordance with SECTION 4 CONDITIONING OF FLOOR COVERING AND SUBFLOOR of AS 1884:2021 in its entirety.



---

During the installation the ambient temperature should be between 10°C and 28°C



### SITE CONDITIONS

Outdoor installations must be fully dry prior to starting works



---

The building must be fully enclosed and weather tight prior to starting works.



---

The installation should not commence unless all other trades are completed, and all surfaces are dry.



---

Provision for protection should be made to ensure no damage by other trades, construction activities or debris.



## INSTALLATION GUIDELINES

---

### INSTALLATION

The flooring contractor general installation procedures should be in accordance with SECTION 4.2 GENERAL INSTALLATION PROCEDURES of AS 1884:2021 in its entirety.



---

The flooring contractor installation procedures should be in accordance with SECTION 5.6 LUXURY VINYL TILE AND PLANK of AS 1884:2021 along with the following manufacturer's recommendations.



---

### MATERIAL INSPECTION

The REGUPOL everroll collection of rubber flooring products are made from recycled materials and slight variations in the EPDM colour chip dispersion or shading is normal, however, it is very important to inspect the material for visual defects prior to beginning the installation.



Inspect the material to verify the material delivered is the correct style, code and quantity.

Disclaimer: Due to the recycled material content, the overall visual appearance of the REGUPOL everroll Tiles and Planks can vary in the depth of shading. This means that some tiles may appear darker than others. No warranty is expressed for light and heavy colour variations in the REGUPOL everroll Tiles and Planks.



**SPECIAL NOTE** - Prior to installation, the installer must report any severe discrepancies to REGUPOL immediately. Do not install the material as no warranty claim will be honoured on material installed with visual defects.

---

### EXPANSION JOINTS

All expansion or movement joints must be carried through the material and the substrate material and back to ground substrate.



All expansion joints to be filled with a permanently deformable material and be resistant to chemical and physical attack such as Fix ALL High Tack Adhesive Sealant or similar.



---

### GROUTING & PERIMETER EDGES

Grouting and perimeter edges are to be filled with a permanently deformable material and be resistant to chemical and physical attack such as Fix ALL High tack Adhesive Sealant or similar.



## INSTALLATION OF FLOORING

### TILE & PLANK INSTALLATION

All REGUPOL everroll Tiles and Planks are stamped on the underside with directional arrows that must be consistently followed throughout the installation.

1. Before you begin the installation, you must find the centre point of the room and make two perpendicular lines through the centre of the room, ensuring that the lines are perfectly square - as shown in drawing "1".

2. You will be starting the installation from any one of the four (4) quarters working from the centre outwards to the perimeter wall, so ensure you store your tiles and planks in the direction you will be commencing from.

3. You will need to cut the material using a tradesman quality snap off blade knife and metal straight edge.

4. You will need a V1 1.6mm Trowel if you are installing REGUPOL everroll 3mm thickness

5. You will need a V2 2.4mm Trowel if you are installing REGUPOL everroll 4mm - 12mm thickness.

6. You will need a medium weight resilient floor roller to ensure sufficient adhesive transfer is made.

7. You are ready to start.



8. Apply the specified REGUPOL adhesive - as per the adhesive technical data sheet - using the specified trowel size to ensure correct volume and coverage. Carefully monitor your trowel notches – do not use worn trowels – they will not allow for adequate adhesive transfer.

9. Starting from the midpoint of the room, evenly spread the adhesive. Take care not to spread more adhesive than can be laid into before the adhesive starts to skin over (climate conditions will vary this time frame). Work within the timing of the adhesive pot life.

10. Evenly spread the adhesive using the specified trowel - any excess adhesive ridges or pooling will cause telegraphing through the material and or bleed through at seams.


11. Start laying the REGUPOL everroll Tiles and Planks from the centre across the chalk line as shown in drawing "2", ensure each tile is laid in the same direction (see stamped arrows on underside of tile).

12. The REGUPOL everroll Tiles and Planks should be cut flush and fitted closely to walls and fixtures.	<input type="checkbox"/>
13. Immediately roll the material with a medium weight stand up roller prior to the adhesive curing. Roll the entire floor in both directions – this ensures optimum adhesive transference to both surfaces. Repeat rolling process in 45 minutes.	<input type="checkbox"/>
14. Weigh down any seams or joins, where necessary, whilst the adhesive is setting.	<input type="checkbox"/>
15. Weigh down any seams or joins, where necessary, whilst the adhesive is setting. Close any gapping in seams using a 3M no residue tape (remove any tape within 24 hours from application).	<input type="checkbox"/>
16. When installing REGUPOL everroll Tiles and Planks over access panel flooring it is very important to arrange the tiles in an appropriate pattern to ensure the edges of the access panels do not align with the edges of the REGUPOL everroll Tiles and Planks.	<input type="checkbox"/>

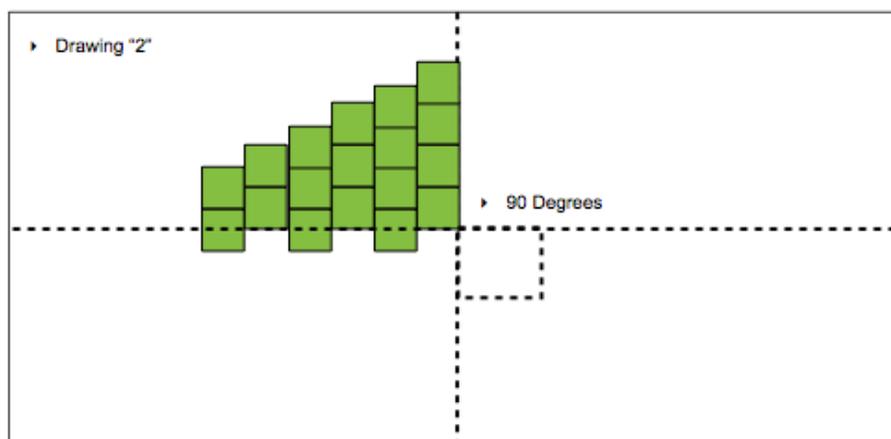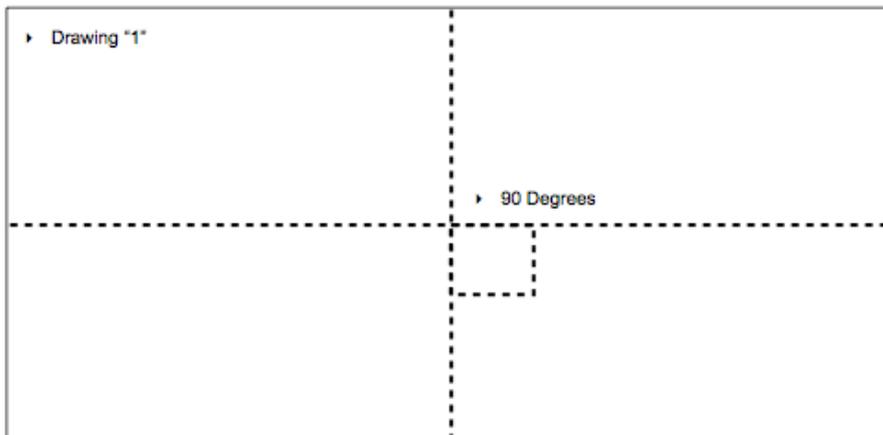


# ATTENTION

## IMPORTANT INFORMATION

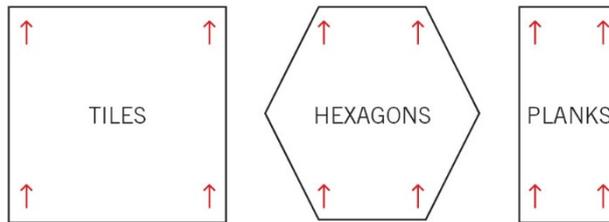

**You must lay Tiles, Hexagons and Planks in the same direction.**

For your convenience we have printed arrows on the underside of the product showing the correct laying direction. Refer to our Installation Guidelines for more information - available from [www.regupol.com.au](http://www.regupol.com.au)

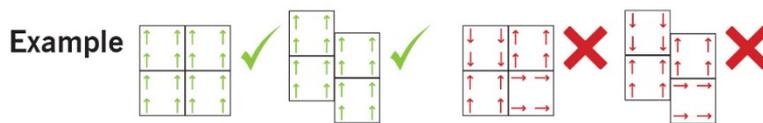

## PROTECTING THE FLOOR

Provision for protection should be made if other trades will be working in the area post installation.	<input type="checkbox"/>
Keep all traffic off the finished floor for 48 hours or as instructed by the flooring contractor, whichever is the greater.	<input type="checkbox"/>
Do not apply heavy loads or move furniture on the material for 72 hours or as instructed by the flooring contractor, whichever is the greater. Where necessary place MDF sheets to spread the point loading of heavy loads.	<input type="checkbox"/>
Do not wet the floor for seven (7) days after the installation or as instructed by the flooring contractor, whichever is the greater.	<input type="checkbox"/>